


# Designer Graphics

## Digital Advertising Solutions

### iPoster Digital Signage Display Instructions

1. When the device is first turned on, a demo video will display
2. Create images at 1080 x 1920 pixels
3. Create Portrait Artwork, then rotate the image 90deg clockwise

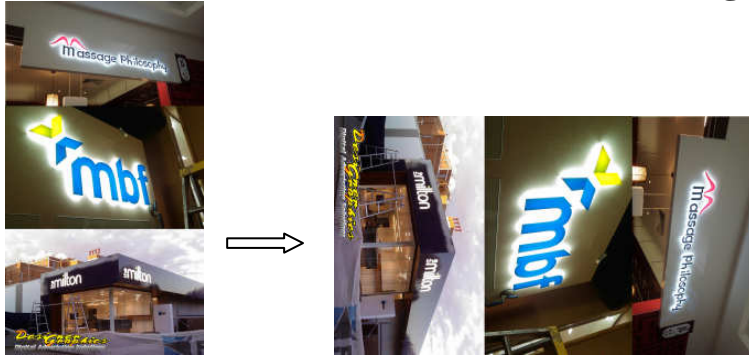

4. Save the file as a JPG in RGB at a size no greater than 1MB
5. Copy these files to the root directory of blank USB drive/stick
6. Insert the USB stick into the 'USB 1' port at the rear of the device.
7. The stick will be automatically detected, existing files will be deleted and your new files copied across.
8. Once prompted remove the USB stick, the device will restart and your new slideshow will display.